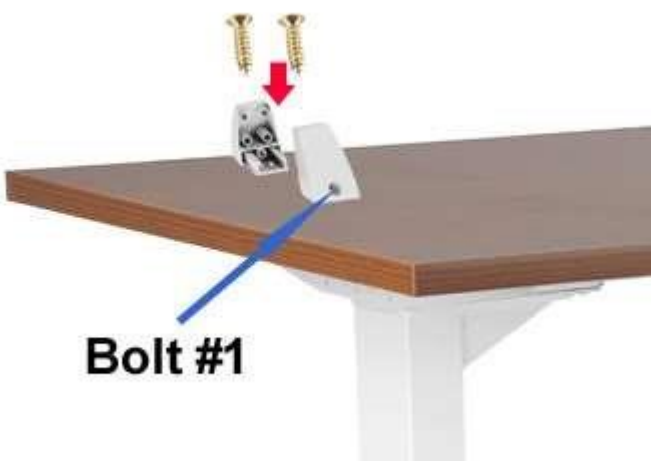
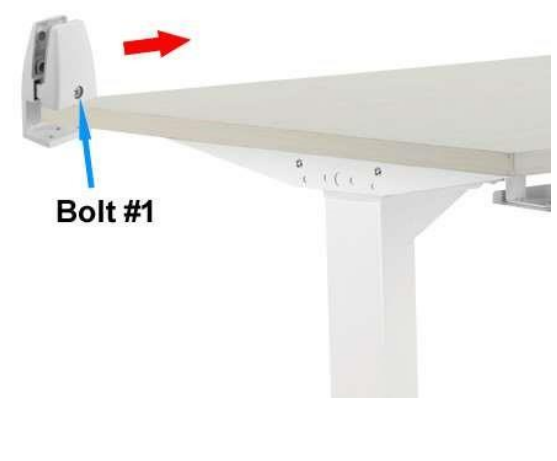


Mounting Guide for ECO Acoustic Panels

Desk Privacy screen / Modesty panel

<p>Option A mount to the top/bottom of the desk via surface mount bracket</p>	<p>Option B mount to the edge of the desk via edge mount bracket</p>
<p>*Note: Two person required to mount the screen under-desk 1. Position the brackets on/under where you want the screen to be mounted, then undo “Bolt #1” shown in Fig. A1 below.</p>	<p>*Note: for desktops with thickness of 25mm or less Only 1. Push the two brackets over the edge where the screen is to be mounted, as shown in Fig. B1 below</p>
<p><u>Fig. A1</u></p>  <p>The diagram shows a white surface mount bracket being attached to a brown desk top. Two gold-colored self-tapping screws are shown being inserted into the top of the bracket. A blue arrow points to a hole on the bottom of the bracket, labeled "Bolt #1". A red arrow points to the top of the bracket where the screws are being inserted.</p>	<p><u>Fig. B1</u></p>  <p>The diagram shows a white edge mount bracket being pushed over the edge of a light-colored desk. A blue arrow points to a hole on the underside of the bracket, labeled "Bolt #1". A red arrow points to the right, indicating the direction of movement for the bracket over the desk edge.</p>
<ol style="list-style-type: none"> 2. Fix half the brackets to the desk top (on or under) with the included self-taping screws, then reattach the other half with Bolt #1. 3. Insert the privacy screen into the mounting brackets, 4. Tighten the “Bolt #1” to firmly grip the screen. 	<ol style="list-style-type: none"> 2. Tighten both brackets from underneath with the supplied bolts, 3. Insert the privacy screen into the mounting brackets, loosen “Bolt #1” shown in Fig. B1 above if necessary, 4. Tighten the “Bolt #1” to firmly grip the screen.