


1. **Warning: Safety Gloves must be worn when mounting this product.**
2. **There may be extra connectors in the package.**

Step 1.

Attach the two brackets to the tray by pushing the brackets upward, as the black arrow shows in the image below:

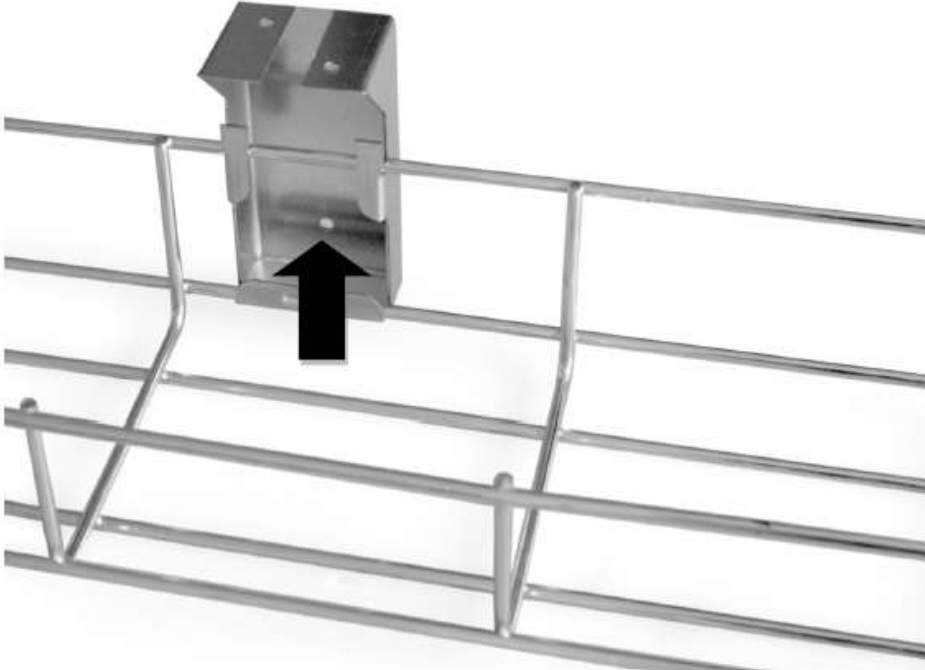

Step 2.

Using the assembled cable tray to mark the mounting points under the desk or front panel, two points for each mounting bracket, drill a small pilot hole ($\varnothing 3$ mm, 12mm deep) for each point.

Step 3.

Mount the assembled cable tray to the desk using the supplied screws and the drilled holes.

Important Notes:

- There are 4 mounting holes in each mounting bracket, 2 facing up and 2 facing back. You can use any 2 of them to mount the bracket whichever are more convenient in your situation, and only 2 screws are provided for each bracket.
- The max load per cable tray is 8KG. You can add more mounting brackets if your planned load is more than 8kg. The general guide is to use one extra bracket for every 2kg extra load.